


# Installation Instruction

**Assembly:** Main Electronic Supplies Ltd Vancouver BC Canada

**Model:** CM-120, PM-40 # PCMB

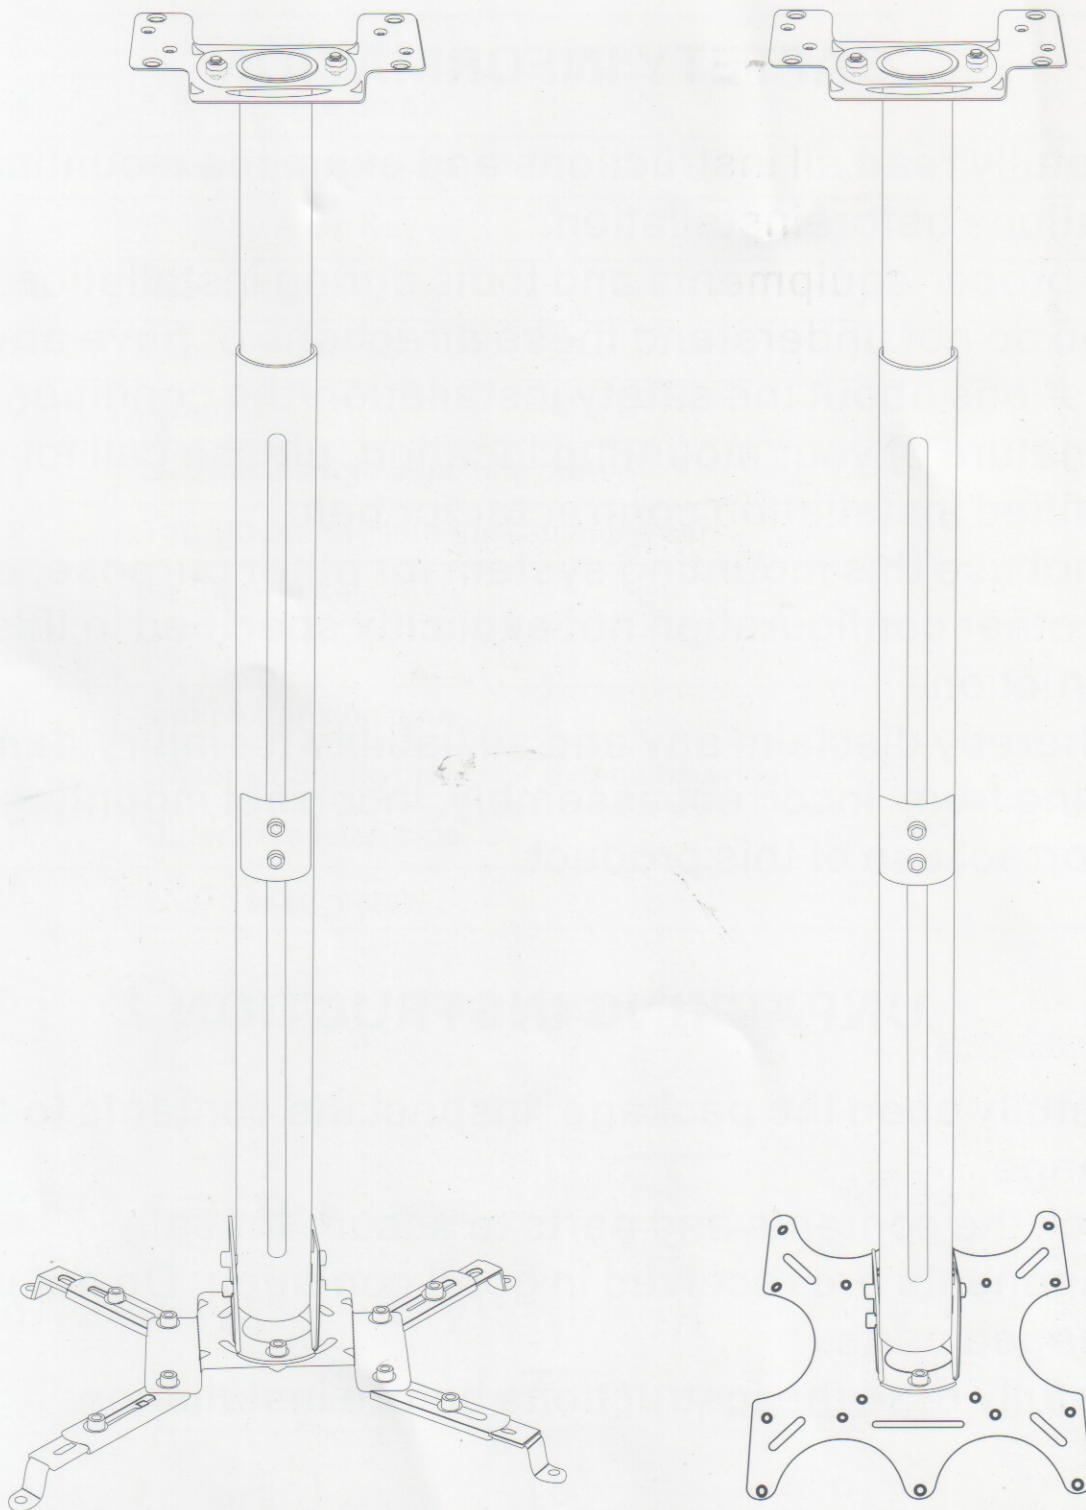

## **WARNING**

The mounting system must be securely attached to the solid wall/ceiling. If the mounting system is not properly installed, it may result in possible injury and damage.

## **SAFETY INFORMATION**


- Carefully read all instructions and examine the mounting locations before installation.
- Use proper equipment and tools during installation.
- If you do not understand these directions or have any questions about the safety installation/the condition of the nature of your mounting location, please call for a qualified installation contractor for help.
- Do not use this mounting system for other purposes, or any other configuration not explicitly specified in this instruction.
- We hereby disclaim any and all liability for injury/damage arising from incorrect assembly, incorrect mounting and incorrect use of this product.

## **UNPACKING INSTRUCTION**

- Carefully open the package, inspect the contents to avoid damage.
- Check the contents and parts to assure that all components are received in good condition. Do not use damaged parts.
- Carefully read the instructions before installation.

# Parts list

Numbers	commodity Specifications	quantity
a	6*18 Socket screw	14
b	M6 Nut	12
c	6*12*1.0 Washer	16
d	5.3*40 Large Screw	4
e	Plastic anchor for wall	4
f	5*30*80 Allen Key	1
g	Adaptor	2
h	Expansion screw	4
y	Adaptor	4
j	U-Shape angle adjusting plate	1
k	Top Mounting Plate (on Ceiling/Wall)	1
l	Security plate	1
m	Adaptor	4
n	Inner extension pipe	1
o	Lower Mounting plate (for extension arms)	1
p	Outer extension pipe	1
q	6*20 Socket screw	4

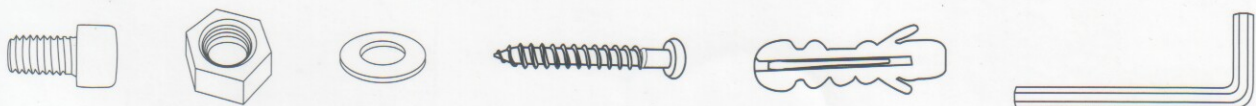

[a] [b] [c] [d] [e] [f]



[g] [h] [y] [j] [k] [l]



[m] [n] [o] [p] [q]

# Projector/LCD TV Assembly Instruction

