



•••DAEWOO•••

97SA301400 (Original)
Gear Assembly
Order# IW-171



97SA507200 (Original)
Idler Wheel
Part # IW-64



•••EMERSON•••

0520244002 (Original)
Mode Switch
Part # MSW-17



0520244003 (Original)
Mode Switch
Part # MSW-18



522B01701
Idler Assembly
Part # IW-62



522B01801
Gear Assembly
Part # IW-63



850A200004
Gear Assembly
Part # IW-69



850A200005
Clutch Assembly
Part # IW-68



850A200049 (Original)
Clutch Assembly
Part # IW-187



850A200050/64 (Original)
Clutch Assembly
Part # IW-188



850A600039
Limit Post Assembly
Part # POST-1



•••GOLDSTAR•••

219-017F (Original)
Cass. Housing
Part # CH-3



321-218A (Original)
Idler Assembly
Part # IW-142



321-223A (Original)
Bracket Ass'y
Part # IW-143



321-369A (Original)
Bracket Ass'y
Part # IW-125



321-397D (Original)
Bracket Ass'y
Part # IW-73



333-201B (Original)
Lever
Part # IW-74



333-202A (Original)
333-208A
Lever
Part # IW-75



333-209A/D (Original)
Pinch Roller
Part # PR-29



374-003A (Original)
Cam Gear
Part # IW-77



374-005A (Original)
Cam Gear
Part # IW-78



386-075A
Idler Assembly
Part # IW-2



•••GOLDSTAR•••

386-139A (Original)
Gear Assembly
Part # IW-79



386-192A (Original)
Pinch Roller
Part # PR-43



386-387B (Original)
Take-Up Arm
Part # IW-80



414-104A (Original)
Motor Assembly
Part # IW-283



431-021A (Original)
Gear Assembly
Part # IW-145



433-015A
Gear
Part # IW-67



433-023A (Original)
Worm Wheel
Part # IW-178



435-042A/B (Original)
Cam Gear
Part # IW-179



435-130A (Original)
Idler Gear
Part # IW-149



435-132A (Original)
Arm Gear
Part # IW-82



435-134A (Original)
Arm Gear
Part # IW-150



•••GOLDSTAR•••

435-136A (Original)
Gear
Part # IW-252



435-148A (Original)
Arm Gear
Part # IW-152



435-169A (Original)
Cushion Gear
Part # IW-83



435-239A (Original)
Gear
Part # IW-135



435-257B (Original)
Gear Drive
Part # IW-84



435-291A (Original)
Gear
Part # IW-85



435-450A (Original)
333-301A
Lever
Part # IW-87



437-004A (Original)
Lever
Part # IW-136



556-085B (Original)
Mode Switch
Part # MSW-15



556-133A/B (Original)
Mode Switch
Part # MSW-6



556-219A
Switch
Part # SW-12



TV/VCR PARTS

HITACHI

 
1381181 (Original)
Part # SBX1637-11
Audio Board



2632923 (Original)
Switch
Part # SW-23



5262063 (Original)
DC-DC Converter Kit
Contains: 1 DC-DC
3 Capacitors
1 IC Protector
Part # DC-2

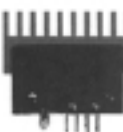

6413663
Idler Wheel
Part # IW-59



6804834 (Original)
6896954
Gear Ass'y
Part # IW-126



 
6807981 (Original)
Gear Ass'y
Part # IW-268



6865575, 6875372
6886971
Idler Assembly
Part # IW-1



6875386/7, 6876043
6876045
Idler Assembly
Part # IW-16




6886792
Gear Assembly
Part # IW-31



6897094, 6897095
Idler Assembly
Part # IW-71



 7021512 (Original)
DC-DC Converter Kit
Contains: 1 DC-DC
3 Capacitors
1 IC Protector
Part # DC-1



HITACHI

7132834 (Original)
Cassette Housing
Part # CH-6



7472125/7 (Original)
Cleaning Arm
Part # IW-212



7580791/2 (Original)
Arm
Part # IW-249



30050441T (Original)
Lift Rail
Part # IW-222



64020402T (Original)
Push Switch
Part # SW-17



CE40595-001 (Original)
Thermistor Posistor
Part # TH-1



PESW0525-02Z (Original)
Tact Switch
Part # SW-20



PQ30028 (Original)
Cam Gear
Part # IW-88



PQ40059 (Original)
Gear
Part # IW-89



PQ40060 (Original)
Gear
Part # IW-90



PQ40067-1-2 (Original)
Slide Gear
Part # IW-92



JVC

PQ40074 (Original)
Door Opener
Part # IW-93



PQ40076-2 (Original)
Hold Lever
Part # IW-94



PQ43542B/D-4 (Original)
Loading Arm
Part # IW-101



PQ43567A-8/13 (Original)
Guide Arm Ass'y
Part # IW-102



PQ43570B/A-1 (Original)
Loading Gear
Part # IW-96



PQ43583A-3 (Original)
Sub Brake Ass'y
Part # IW-130



PQ44326A-3 (Original)
Plate Ass'y
Part # IW-197



PQ44581B (Original)
Plate Ass'y
Part # IW-196



PQ46325B (Original)
Guide Arm Ass'y
Order# IW-200



PQ46337A-7 (Original)
Loading Arm
Order# IW-195



PQ46342B/A6/C9 (Original)
Lever Assembly
Part # IW-225



JVC

PTU96031-678C (Original)
Gear Kit
Part # IW-97



PU51380A-2
PU53462A
Take-Up Clutch
Part # IW-8



PU51402A
Idler Wheel
Part # IW-7



PU55373
Clutch
Part # IW-9



PU55374-3-8
Idler Assembly
Part # IW-45



PU56043-1-4
Take-Up Clutch
Part # IW-40



PU58642 (Original)
Mode Switch
Part # MSW-19



PU58645-1-4
Idler Wheel
Part # IW-65



PU60556-2-2 (Original)
Guide Post
Part # POST-10



PU60622-1-2 (Original)
Slide Switch
Part # MSW-2



PU60623 (Original)
Photo Interrupter
Part # PI-14



MANELCO

TV/VCR PARTS

•••••JVC•••••

PU60953-1-1
Clutch Assembly
Part # IW-112



PU60973-1-1 (Original)
Slide Switch
Part # MSW-3



PU61103-2-7 (Original)
Pole Base (T)
Part # POST-6



PU61151-2-6/7
(Original)
Pole Base (S)
Part # POST-5



PU61245-1-3
(Original)
Clutch Unit
Part # IW-134



PU61247-1-1 (Original)
Mode Switch
Part # MSW-7



PUS29499B (Original)
Cass. Housing
Part # CH-1



QSP1A11-V10Z (Original)
QSQ4H11-V01Z
Switch
Part # SW-19



YU40624-1-1 (Original)
Clutch Assembly
Part # IW-160



••Mitsubishi••

522B01701
Idler Assembly
Part # IW-62



522B01801
Gear Assembly
Part # IW-63



••Mitsubishi••

522P00201
Unit Reel
Part # IW-43



641B094010
Cam Gear B
Part # IW-34



641C803010
Gear Arm
Part # IW-100



948D020010
Pinch Roller
Part # PR-21



•••••N.E.C.~•••••

082737BB1
082737BC1
Guide Post
Part # POST-3



161-781-79
161-808-01
Idler Assembly
Part # IW-30



79V23059
Clutch
Part # IW-9



••Panasonic••

A61454740AP
(Original)
Thermal Cutout
Part # MI-20



ANE6142-F60 (Original)
Switch
Part # SW-13



ESB8249V (Original)
Switch
Part # SW-22



••Panasonic••

ESD11H120
(Original)
Switch
Part # SW-24



EVO21005G
Switch
Part # SW-12



EVQQBH12T
(Original)
Switch
Part # SW-23



EVQQEC04K
(Original)
Switch
Part # SW-31



EVQWXD001
(Original)
Mode Switch
Part # MSW-21



EWGANAS93A14
(Original)
Variable Resistor
Part # MI-1



PQSH1A109Z
(Original)
Switch
Part # SW-25



PQVFCFH455F1
(Original)
Filter
Part # MI-19



RXL0049 (Original)
Lever
Part # IW-230



VDGS0134
(Original)
Gear
Part # IW-156



VDGS0136
(Original)
Gear
Part # IW-170



VDGS0137
(Original)
Gear
Part # IW-154



••Panasonic••

VDGS0200
Gear
Part # IW-98



VDGS0293 (Original)
VDGS0323
Worm Wheel
Part # IW-199



VDGS0416 (Original)
Gear
Part # IW-182



VDP1042 (Original)
Pinch Roller
Part # PR-46



VMLS0508 (Original)
Gear
Part # IW-151



VMLS0634 (Original)
Gear
Part # IW-164



VMLS0749 (Original)
Gear
Part # IW-163



VMMS0105 (Original)
Slide Plate
Part # IW-173



 
VSJS0018 (Original)
Panasonic Solenoid
Part # MI-3



VSS0110 (Original)
Mode Switch
Part # MSW-16



VSS0175A (Original)
Mode Switch
Part # MSW-20

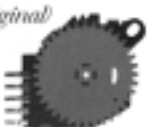


TV/VCR PARTS

•••Panasonic•••

VSSS0052
(Original)
Mode Switch
Part # MSW-12



 VSSS0129
(Original)
Mode Switch
Part # MSW-11



VXAS1709 *(Original)*
Side Plate
Part # IW-248



VXL1743
VXL1481
Pinch Roller
Part # PR-38



VXL1856
Assembly
Part # IW-107



VXL1910
Assembly
Part # IW-114



VXL2246
Pinch Roller
Part # PR-42



VXLS0383
VXLS0454
Idler Assembly
Part # IW-66



VXLS0850 *(Original)*
Load Arm
Part # IW-189



VXLS0852 *(Original)*
Load Arm
Part # IW-190



VXP0174
Idler Wheel
Part # IW-21



VXP0245
Idler Wheel
Part # IW-19



•••Panasonic•••

VXP0344
Idler Wheel
Part # IW-23



VXP0521
Idler Assembly
Part # IW-2



VXP0523
Assembly
Part # IW-70



VXP0600 *(Original)*
Center Clutch
Part # IW-184




VXPS0116
Idler Wheel
Part # IW-18



VXPS0146 *(Original)*
Worm Ass'y
Part # IW-162



 VXPS0310 *(Original)*
Gear
Part # IW-166



VXPS0372 *(Original)*
Gear
Part # IW-159



VXYS0885 *(Original)*
Cassette Housing
Part # CH-4



VXZ0270 *(Original)*
Brake
Part # IW-238



144263
Idler Wheel
Part # IW-21



•••RCA•••

147060
Idler Assembly
Part # IW-59



 
148580
Idler Wheel
Part # IW-23



158190, 162662
Idler Assembly
Part # IW-16



163818 *(Original)*
DC-DC Converter Kit
Contains: 1 DC-DC
3 Capacitors
1 IC Protector
Part # DC-2



164113
Idler Assembly
Part # IW-1



177194
Idler Assembly
Part # IW-31



182920 *(Original)*
Shaft
Part # IW-232



185131 *(Original)*
Button
Part # MI-23



185427 *(Original)*
Worm Gear
Part # IW-162



190051 *(Original)*
Gear
Part # IW-156



•••RCA•••

190053 *(Original)*
Gear
Part # IW-170



190054 *(Original)*
Gear
Part # IW-154



 
190108 *(Original)*
Gear
Part # IW-151



190109
(Original)
Gear
Part # IW-164



190262 *(Original)*
Mode Switch
Part # MSW-21

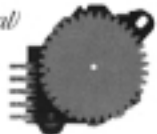

191367 *(Original)*
Idler Assembly
Part # IW-126



191368
Idler Assembly
Part # IW-71



192242
Idler Assembly
Part # IW-51



192873 *(Original)*
Arm
Part # IW-234



201632 *(Original)*
Part # SBX1637-11
Audio Board



•••RCA•••

MANELCO

TV/VCR PARTS

•••••RCA•••••

202036 *(Original)*
Gear
Part # IW-212



 
206975 *(Original)*
Load Arm
Part # IW-189



206976 *(Original)*
Load Arm
Part # IW-190



206981 *(Original)*
Gear
Part # IW-166

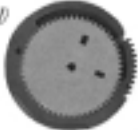

207768 *(Original)*
Thermister
Part # MI-10



207799
Gear
Part # IW-99



212497 *(Original)*
Slide Plate
Part # IW-174



213847 *(Original)*
Pinch Roller
Part # PR-48



214754 *(Original)*
Capacitor
Part # MI-9



215500
Tact Switch
Part # SW-14



215543 *(Original)*
Connector
Part # MI-8



•••••RCA•••••

220977 *(Original)*
Tuner
Part # TN-3



221066 *(Original)*
Eject Gear Kit
Part # IW-175



225117 *(Original)*
Gear
Part # IW-182



225141 *(Original)*
Slide Plate
Part # IW-173



225159 *(Original)*
Gear
Part # IW-159



230519 *(Original)*
Gear Assembly
Part # IW-171



250193 *(Original)*
Gear
Part # IW-163



•••••SAMSUNG•••••

TECC1880PA09C(S)
(Original)
Tuner
Part # TN-1



5253-701-1105V
Idler Assembly
Part # IW-53



6052-600-3101V
Idler Assembly
Part # IW-51



62203-0025-01 *(Original)*
Eject Gear Kit
Part # IW-175



•••••SAMSUNG•••••

66054-609-410
Gear
Part # IW-99



67179-0120-00
(Original)
Tuner
Part # TN-3



9000-250-3308V
Idler Wheel
Part # IW-39



•••••Sanyo/Fisher•••••

143-0-4204-00300
143-0-4204-00400
Idler Assembly
Part # IW-5



143-0-4204-00700
Idler Assembly
Part # IW-28



143-0-4804-00100
Pulley
Part # IW-11



143-0-4904-00900
Idler Assembly
Part # IW-12



143-0-4904-02400
Idler Assembly
Part # IW-29



143-0-662T-14730
613-037-4875
Idler Assembly
Part # IW-55



143-0-662T-15620
Idler Assembly
Part # IW-32



143-0-662T-15621
613-037-4905
613-097-8998
Idler Assembly
Part # IW-52



143-0-741T-20001
Idler Assembly
Part # IW-14



•••••Sanyo/Fisher•••••

610-011-2698
645-000-1383
Tact Switch
Part # SW-14



613-021-9701 *(Original)*
Tension Band
Part # TB-10



613-022-0066
Idler Assembly
Part # IW-113



613-022-0134 *(Original)*
Gear Assembly
Part # IW-266



613-022-0141
Idler Assembly
Part # IW-108



613-022-2015 *(Original)*
Bracket
Part # IW-258



613-022-2428 *(Original)*
613-090-6373
Gear
Part # IW-256



613-022-2534
Idler Assembly
Part # IW-72



613-022-2619 *(Original)*
Gear Assembly
Part # IW-262



613-038-0197 *(Original)*
Brake Assembly
Part # IW-254



613-054-6937 *(Original)*
Gear
Part # IW-255



613-061-7518 *(Original)*
Brake Assembly
Part # IW-265



TV/VCR PARTS

Sanyo/Fisher

- 613-090-6380 *(Original)*
Gear
Part # IW-257 
- 613-100-4573 *(Original)*
Tension Band
Part # TB-9 
- 613-100-4689 *(Original)*
Gear Assembly
Part # IW-253 
- 613-102-0900 *(Original)*
613-130-9890
Gear Assembly
Part # IW-270 
- 613-135-7662 *(Original)*
Gear
Part # IW-261 
- 614-210-3999 *(Original)*
Joint Ass'y
Part # MI-25 
- 614-249-1355 *(Original)*
Switch
Part # SW-33 
- 614-253-2737 *(Original)*
Variable
Part # MI-11 
- 614-253-9071 *(Original)*
Gear
Part # IW-273 
- 645-008-7837 *(Original)*
613-077-4361
613-110-0374
Mode Switch
Part # MSW-22 
- 645-006-9673 *(Original)*
645-139-4308
Tact Switch
Part # SW-34 
- 645-013-2599 *(Original)*
Gear Assembly
Part # IW-171 


SHARP

- NIDL0006GEZZ
Idler Assembly
Part # IW-4 
- NGERH1057GEZZ
Gear
Part # IW-109 
- NGERH1076GEZZ
(Original)
Gear
Part # IW-105 
- NGERH1128GEZZ
(Original)
Gear Assembly
Part # IW-111 
- NGERH1219GEZZ
(Original)
Gear
Part # IW-191 
- NGERH1225GEZZ
(Original)
Gear
Part # IW-201 
- NGERH1226GEOO
(Original)
Gear
Part # IW-192 
- NGERH1227GEZZ
(Original)
Gear
Part # IW-193 
- NPLYV0051GEZZ
Idler Assembly
Part # IW-42 
- NPLYV0107GEZZ
Idler Assembly
Part # IW-26 
- QSWR0010GEZZ *(Original)*
Mode Switch
Part # MSW-8 

SHARP

- QSWR0017GEZZ *(Original)*
Mode Switch
Part # MSW-10 
- QSWR0019/21GEZZ *(Original)*
Mode Switch
Part # MSW-9 
- QSWR0023GEZZ *(Original)*
Mode Switch
Part # MSW-4 
- QSWR0026GEZZ *(Original)*
Mode Switch
Part # MSW-5 
- RRLYU0022CEZZ
Relay
Part # RL-2 
- A-6759-344-A *(Original)*
X-3679-264-1
Pinch Roller
Part # PR-18 
- A-7040-219-A
(Original)
Pinch Roller
Part # PR-49 
- A-7040-224-J
(Original)
Guide Arm Assembly
Part # Post-12 
- A-7040-474-C *(Original)*
Contains 5 Gears
Modification for
3-958-156-02
Part # IW-274 
- 1-228-482-00
(Original)
Focus Assembly
Part # MI-18 
- 1-437-195-11
Sony Packaged
MI-32 

SONY

- 1-465-371-11
Tuner
Part # TN-200 
- 1-554-813-41 *(Original)*
Keyboard Switch
Part # SW-7 
- 1-571-532-21 *(Original)*
Tact Switch
Part # SW-34 
- 1-571-754-11/31/61 *(Original)*
Push Switch
Part # SW-10 
- 1-572-085-11 *(Original)*
Leaf Switch
Part # SW-9 
- 1-572-283-11 *(Original)*
Slide Switch
Part # SW-27 
- 1-572-704-21 *(Original)*
1-692-118-21
Keyboard Switch
Part # SW-11 
- 1-572-922-11 *(Original)*
Switch
Part # SW-30 
- 1-572-986-11 *(Original)*
Mode Switch
Part # MSW-24 
- 1-573-657-11 *(Original)*
Plug F-Pin
Part # MI-15 
- 1-692-037-31 *(Original)*
Keyboard Switch
Part # SW-15 
- 1-692-459-11 *(Original)*
Switch
Part # SW-18 

TV/VCR PARTS

SONY

1-762-141-12 (Original)
1-762-142-12
Keyboard Switch
Part # SW-28



1-762-357-11 (Original)
Switch
Part # SW-16



1-806-214-11/31
Thermistor Posistor
Part # TH-1



1-807-288-11 (Original)
Black Varistor
Part # MI-13



1-810-053-11/21
(Original)
Green Varistor
Part # MI-12



3-578-143-11 (Original)
Pinch Roller
Part # PR-47



3-684-163-01 (Original)
Gear
Part # IW-124



3-736-015-01 (Original)
Gear
Part # IW-119



3-736-116-01 (Original)
Gear
Part # IW-120



Sony 3-736-142-01 (Original)
Arm
Part # IW-276



3-736-143-01 (Original)
Cam Gear
Part # IW-121



SONY

3-736-147-01 (Original)
Gear
Part # IW-220



3-736-148-01 (Original)
(Right) Threading Gear
Part # IW-204



3-736-176-01 (Original)
Gear
Part # IW-122



3-736-177-01 (Original)
Bracket
Part # IW-123



3-945-700-01 (Original)
Gear
Part # IW-224



3-946-922-01 (Original)
Gear
Part # IW-277



3-946-958-01 (Original)
Mode Switch
Part # MSW-23



3-952-182-01 (Original)
Cam Elevator
Part # IW-203



3-958-156-03 (Original)
Caution: Different from 3-958-156-02
Part # IW-251



3-958-476-01 (Original)
(S) Loading Gear
Part # IW-285



3-977-451-01 (Original)
(S) Loading Gear
Part # IW-286



SONY

3-977-455-02 (Original)
(T) Loading Gear
Part # IW-287



4-928-962-01 (Original)
Pinch Roller
Part # PR-45



4-957-284-01 (Original)
Gear
Part # IW-246



8-746-371-10/11/20
(Original)
Audio Board
Part # SBX1637-11



8-749-010-25 (Original)
Transistor
Part # MN2488OPY



8-749-010-26 (Original)
Transistor
Part # MP1620OPY



8-835-350-02
(Original)
Capstan Motor
Part # MO-6



8-835-382-03
(Original)
Capstan Motor
Part # MO-5



X-2625-356-2 (Original)
Gear
Part # IW-115



X-3358-204-1
(Original)
Pinch Roller Ass'y
Part # PR-44



X-3712-032-2 (Original)
Pinch Roller
Part # PR-39



SONY

X-3727-770-1 (Original)
X-3749-173-4
Pinch Roller
Part # PR-40



X-3727-782-1
(Original)
Gear
Part # IW-116



X-3727-926-1 (Original)
Gear Arm Ass'y
Part # IW-221



X-3727-951-9 (Original)
Real Table Assembly
Part # IW-172



X-3728-843-1 (Original)
Gear Right Ass'y
Part # IW-245



X-3942-218-4 (Original)
Arm Assembly
Part # IW-117



X-4920-346-1 (Original)
Idler Assembly
Part # IW-118

 


TOSHIBA

23145227
Tact Switch
Part # SW-14



32502571 (Original)
Power Switch
Part # SW-1



32554102 (Original)
Rivet
Part # MI-24



MANELCO

TV/VCR PARTS

TOSHIBA

70031477 (Original)
Lever
Part # IW-267



70326538
Idler Assembly
Part # IW-27



70363446 (Original)
Lever
Part # IW-282



70368125 (Original)
Push Catch
Part # MI-26



TMVH2008A (Original)
Tuner
Part # TN-3



ZENITH

812-2029-02 (Original)
Bracket Assembly
Part # IW-73



834-159 (Original)
Gear
Part # IW-89



834-160 (Original)
Gear
Part # IW-90



834-163 (Original)
Cam Gear
Part # IW-88



834-165-01 (Original)
Gear
Part # IW-92



834-295-02 (Original)
Loading Gear
Part # IW-96



ZENITH

834-341 (Original)
Gear
Part # IW-85



834-364 (Original)
Rack Gear
Part # IW-86



834-402 (Original)
Kit contains:
IW-80 & 87
Part # IW-219



843-633-02 (Original)
Cass. Housing
Part # CH-3



85-1707-03 (Original)
Slide Switch 250V-5A
Part # SW-4



857-2406 (Original)
Slide Switch
Part # MSW-19



885-0111-3 (Original)
Mode Switch
Part # MSW-6



885-1059 (Original)
Slide Switch
Part # MSW-2



917-694 (Original)
Door Opener
Part # IW-93



917-750 (Original)
Lever Arm
Part # IW-94



917-863 (Original)
Lever
Part # IW-75



ZENITH

917-902 (Original)
Pinch Roller
Part # PR-29



928-129 (Original)
Cam Gear
Part # IW-78



928-134 (Original)
Cam control
Part # IW-141

 


948-520/2
948-536-01
Idler Wheel
Part # IW-65



www.mainelectronics.com

Washer Kit

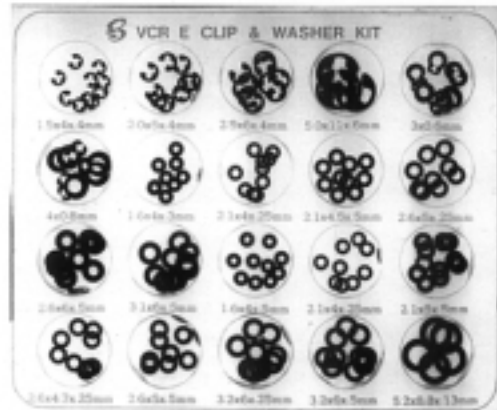

VCR "E" Clip & Washer Kit
(20 Type x 10 each) Total 200Pcs.

WK-1

Spring Kit



VCR Tension Spring Kit-1
(20 Type x 10 each) Total 200Pcs.

SK-1